

Please read and save these instructions. Read carefully before attempting to assemble, install, operate or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage! Retain instructions for future reference.

Pressure Booster Pumps

Description

Pressure booster pumps increase water pressure from city mains or private water systems. Applications include providing high water pressure for washing buildings, dairy walls or floors, hog parlors, poultry houses, rinsing or spray cooling equipment, lawn sprinkling and insecticide spraying.

Single-phase models are equipped with a capacitor start, thermal protected motor. Three-phase models require separate overload protection.

Unpacking

When unpacking the unit, inspect carefully for any damage that may have occurred during transit.

NOTE: Use pump with clear water only.

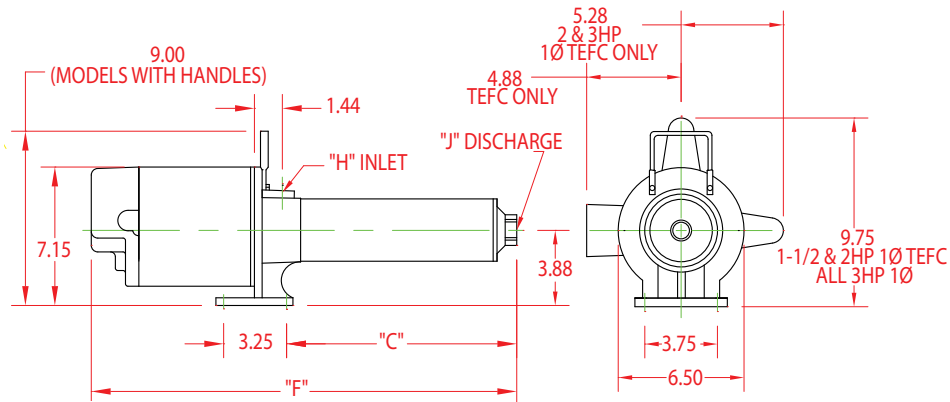


Figure 1

IL0391B

| Pump Dimensions 60 Hz | | | | | | | Chart A | |
|-----------------------|-----|-------|-------|-------|---------|---------|---------|------|
| HP | GPM | Stage | "C" | F | | | H | J |
| | | | | F&W | TEFC | | | |
| | | | | | 1 Phase | 3 Phase | | |
| 1/3 | 5 | 8 | 10.19 | 19.81 | - | - | .75 | .75 |
| 1/3* | 5 | 8 | 10.19 | 20.06 | 22.04 | - | .75 | .75 |
| 1/2 | 5 | 12 | 13.38 | 23.25 | 23.23 | 24.10 | .75 | .75 |
| 1/2* | 5 | 14 | 14.97 | 25.34 | 26.82 | 25.69 | .75 | .75 |
| 3/4 | 5 | 16 | 16.54 | 26.91 | 28.77 | 27.51 | .75 | .75 |
| 3/4 | 7 | 12 | 13.38 | 23.75 | 25.61 | 24.35 | .75 | .75 |
| 3/4* | 7 | 14 | 14.97 | 25.84 | 27.20 | 25.94 | .75 | .75 |
| 1 | 10 | 14 | 16.31 | 27.18 | 29.16 | 28.02 | .75 | .75 |
| 1-1/2 | 10 | 16 | 18.13 | 29.62 | 31.48 | 30.07 | .75 | .75 |
| 1* | 10 | 20 | 21.69 | 33.18 | 34.54 | 33.40 | .75 | .75 |
| 1* | 10 | 22 | 23.50 | 34.99 | 36.35 | 35.21 | .75 | .75 |
| 1* | 10 | 23 | 24.38 | 35.87 | 37.73 | 36.09 | .75 | .75 |
| 2 | 19 | 14 | 17.89 | 29.88 | 32.12 | 30.87 | .75 | .75 |
| 1-1/2* | 19 | 20 | 24.06 | 36.05 | 37.41 | 36.00 | .75 | .75 |
| 2* | 19 | 22 | 26.13 | 38.12 | 40.36 | 39.11 | .75 | .75 |
| 2 | 27 | 11 | 15.38 | 27.37 | 29.61 | 28.36 | 1.00 | 1.00 |
| 3 | 27 | 14 | 18.50 | 30.49 | 33.85 | 33.35 | 1.00 | 1.00 |
| 2* | 27 | 17 | 21.59 | 33.58 | 35.82 | 34.57 | 1.00 | 1.00 |
| 3 | 27 | 17 | 21.59 | 33.74 | - | - | 1.00 | 1.00 |
| 2 | 35 | 6 | 13.94 | 25.93 | 28.17 | 26.92 | 1.00 | 1.00 |
| 3 | 35 | 8 | 17.13 | 29.12 | 32.48 | 31.98 | 1.00 | 1.00 |
| 1-1/2* | 35 | 8 | 17.13 | 29.12 | 30.48 | 29.07 | 1.00 | 1.00 |
| 3* | 35 | 14 | 26.86 | 38.85 | 42.21 | 41.71 | 1.00 | 1.00 |

| PRESSURE ADDED - PSI† | | | | | 10 | 20 | 40 | 60 | 80 | 100 | 120 | 140 | 160 | 180 | 200 | 220 | Max. Press. PSI | Suction Pipe Tap NPT | Disch. Pipe Tap NPT |
|------------------------|--------------------------------|------------------|-------|-------|-----------------------------|------|------|------|------|------|------|------|------|------|------|------|-----------------|----------------------|---------------------|
| Stainless Steel Fitted | Powder-Coated Cast Iron Fitted | Cast Iron Fitted | HP | Stage | Output - Gallons per Minute | | | | | | | | | | | | | | |
| 60Hz Models | | | | | | | | | | | | | | | | | | | |
| PB0508S031 | PB0508C031 | PB0508A031‡ | 1/3 | 8 | 10.2 | 9.6 | 8.3 | 6.5 | 4.3 | | | | | | | | 96 | 3/4" | 3/4" |
| PB0512S051 | PB0512C051 | PB0512A051‡ | 1/2 | 12 | 10.0 | 9.5 | 8.3 | 7.1 | 6.0 | 4.0 | 2.3 | | | | | | 132 | | |
| PB0516S071 | PB0516C071 | PB0516A071 | 3/4 | 16 | 10.2 | 9.7 | 9.1 | 8.3 | 7.5 | 6.6 | 5.8 | 4.6 | 3.3 | | | | 189 | | |
| PB0712S071 | PB0712C071 | PB0712A071 | 3/4 | 12 | 14.0 | 13.4 | 12.2 | 10.9 | 9.5 | 8.9 | 7.0 | 4.6 | | | | | 158 | | |
| PB1014S101 | PB1014C101 | PB1014A101 | 1 | 14 | * | * | 14.5 | 13.4 | 12.3 | 11.2 | 9.8 | 8.0 | 6.0 | 2.3 | | | 183 | | |
| PB1016S151 | PB1016C151 | PB1016A151 | 1-1/2 | 16 | * | * | 15.0 | 14.1 | 13.1 | 12.1 | 11.0 | 9.8 | 8.2 | 5.2 | 2.0 | | 212 | | |
| PB1914S201 | PB1914C201 | PB1914A201 | 2 | 14 | 27.6 | 27.0 | 25.7 | 24.2 | 22.6 | 20.8 | 18.7 | 16.2 | 12.9 | 7.7 | | | 190 | | |
| PB3506S201 | PB3506C201 | PB3506A201 | 2 | 6 | 48.0 | 47.0 | 42.5 | 35.2 | 24.0 | | | | | | | | 85 | 1" | 1" |
| PB2711S201 | PB2711C201 | PB2711A201 | 2 | 11 | * | * | 31.5 | 29.5 | 27.1 | 24.2 | 20.3 | 13.0 | | | | | 147 | | |
| PB3508S301 | PB3508C301 | PB3508A301 | 3 | 8 | 48.0 | 47.5 | 44.0 | 40.0 | 35.2 | 27.5 | | | | | | | 118 | | |
| PB2714S301 | PB2714C301 | PB2714A301 | 3 | 14 | * | * | 33.0 | 31.5 | 29.8 | 27.9 | 25.6 | 22.8 | 18.9 | 11.1 | | | 187 | | |
| PB2717S303** | - | - | 3 | 17 | * | * | * | 34.1 | 32.3 | 30.5 | 28.3 | 25.8 | 23.1 | 20.0 | 16.6 | 11.4 | 225 | | |
| - | - | PB5504A201 | 2 | 4 | 77.6 | 71.5 | 52.5 | | | | | | | | | | 55 | 2" | 2" |
| - | - | PB5506A301 | 3 | 6 | 77.8 | 74.4 | 65.0 | 51.1 | 31.9 | | | | | | | | 83 | | |
| - | - | PB8504A201 | 2 | 4 | 105.8 | 90.0 | 47.0 | | | | | | | | | | 49 | | |
| - | - | PB8505A301 | 3 | 5 | 108.8 | 98.8 | 60.0 | 25.0 | | | | | | | | | 60 | | |

‡ Equipped with carrying handle. 132079 handle available as an option for other models.

† Example: If PB0508A031 pump is connected to supply line of sufficient capacity, carrying water at 40 PSI, and the output of the pump is held to 7.3 GPM by a gate valve, the pump will add 40 PSI to line pressure for a total output pressure of 80 PSI.

* Operation of pump in this range may result in reduced pump life and/or motor damage.

To keep pump and seal lubricated, a minimum flow of 1.5 GPM must always be maintained through the pump.

** Only available in 3 phase

Motor voltage: Open Drip Proof

Single Phase 1/3 - 2 HP - 115/230; 3 HP - 230V 60 Hz.

Three Phase 1/2 - 2 HP - 208-230/460, 50/60Hz.

Three Phase 3 HP - 208-230/460, 60 HZ

For three phase models, use suffix "3" on the model no.

Example: PB0512A053

Totally Enclosed Fan Cooled

Single Phase: 1/2 thru 3 HP - 115/230V 60/50Hz

Three Phase: 1/2 thru 3 HP - 208/230/460V 60/50Hz

| Single Phase Motor Data 60HZ | | | | | | | Chart C | |
|---|---------------|---------------------------------|---------------------------|------|-------------------------|------|-------------|--|
| Single Phase† 60 Hz 3450 RPM Capacitor Start | | | | | | | | |
| HP | Motor Voltage | Factory Connected Motor Voltage | Service Factor Motor Amps | | Locked Rotor Motor Amps | | Code Letter | |
| | | | 115V | 230V | 115V | 230V | | |
| 1/3 | 115/230 | 115V | 8.6 | 4.3 | 26.0 | 13.0 | K | |
| 1/2 | 115/230 | 115V | 13.0 | 6.5 | 36.0 | 18.0 | K | |
| 3/4 | 115/230 | 115V | 14.0 | 7.0 | 52.0 | 26.0 | K | |
| 1 | 115/230 | 230V | 18.0 | 9.0 | 78.0 | 39.0 | L | |
| 1-1/2 | 115/230 | 230V | 21.0 | 10.5 | 98.0 | 49.0 | J | |
| 2 | 115/230 | 230V | 25.0 | 12.5 | 116.0 | 58.0 | H | |
| 3 | 230 | 230V | - | 13.5 | - | 53.0 | D | |

| Single Phase Motor Data 50HZ | | | | | | | |
|---|---------|------|------|------|-------|------|---|
| Single Phase† 50 Hz 2850 RPM Capacitor Start | | | | | | | |
| 1/2 | 115/230 | 115V | 10.0 | 5.0 | 48.0 | 24.0 | M |
| 3/4 | 115/230 | 115V | 14.4 | 7.2 | 64.0 | 32.0 | L |
| 1 | 115/230 | 230V | 16.4 | 8.2 | 72.0 | 36.0 | K |
| 1-1/2 | 115/230 | 230V | 23.6 | 11.8 | 104.0 | 52.0 | K |
| 2 | 230 | 230V | - | 13.2 | - | 55.0 | H |

†Thermal overload protector - automatic reset

| Three Phase Motor Data | | | | | | | Chart D |
|---|---------------|---------------------------------|---------------------------|------|-------------------------|------|-------------|
| Three Phase† 60/50 Hz 3450/2850 RPM Capacitor Start | | | | | | | |
| HP | Motor Voltage | Factory Connected Motor Voltage | Service Factor Motor Amps | | Locked Rotor Motor Amps | | Code Letter |
| | | | 230V | 460V | 230V | 460V | |
| 3/4 | 208-230/460 | 230V | 3.5 | 1.75 | 19.0 | 9.5 | K |
| 1 | 208-230/460 | 230V | 4.5 | 2.25 | 26.9 | 13.5 | K |
| 1-1/2 | 208-230/460 | 230V | 5.7 | 2.85 | 33.5 | 16.8 | K |
| 2 | 208-230/460 | 230V | 7.4 | 3.70 | 44.0 | 22.0 | K |
| 3†† | 208-230/460 | 230V | 9.8 | 4.90 | 48.0 | 24.0 | D |

††3 HP, 3 Phase motor operable on 60Hz only.

| Material Construction | | Chart E |
|---------------------------|---|--|
| Component | Standard Models* | Stainless Steel Models |
| Motor | Rear access - Nema 56J face | Rear access - Nema 56J face |
| Bearings | Ball-ball, permanently lubricated | Ball-ball, permanently lubricated |
| Impellers | Noryl with 304 stainless steel bearing insert | Noryl with 304 stainless steel bearing insert |
| Diffuser | Noryl | Noryl |
| Diffuser plates | Delrin | Delrin |
| Pump shaft | 416 Stainless steel | 304 Stainless steel |
| Pump shaft coupling | 316 Stainless steel | 316 Stainless steel |
| Pump shell | 304 Stainless steel | 304 Stainless steel |
| Discharge & inlet casting | Cast iron | 304 Stainless steel |
| O-Rings | Buna-N | Viton |
| Seal composition | Carbon-silicon carbide, stainless steel spring and Buna-N | Carbon-silicon carbide, stainless steel spring and Viton |

*Models with powder coated inlet & discharge also available.

| Minimum Wire Size Chart (Gauge) | | | | | | | | Chart F |
|---------------------------------|---------|-------|--|--------|---------|---------|---------|---------------------|
| Motor HP | Volts | Phase | Distance In Feet From Motor To Service Panel | | | | | Breaker Size (Amps) |
| | | | 0-50 | 50-100 | 100-150 | 150-200 | 200-300 | |
| | | | Wire Size | | | | | |
| 1/3 | 115/230 | 1 | 14/14 | 14/14 | 14/14 | 12/14 | 12/14 | 15/15 |
| 1/2 | 115/230 | 1 | 12/14 | 12/14 | 12/14 | 12/14 | 10/14 | 15/15 |
| 3/4 | 115/230 | 1 | 12/14 | 12/14 | 10/14 | 10/12 | 8/12 | 15/15 |
| 1 | 115/230 | 1 | 10/14 | 10/14 | 10/12 | 8/12 | 6/10 | 20/15 |
| 1 1/2 | 115/230 | 1 | 10/12 | 8/12 | 6/12 | */10 | */10 | 30/15 |
| 2 | 115/230 | 1 | 10/12 | 8/12 | 6/12 | */10 | */10 | 30/15 |
| 3 | 230 | 1 | 10 | 10 | 10 | 10 | 8 | 20 |
| 3/4 | 230/460 | 3 | 14/14 | 14/14 | 14/14 | 14/14 | 14/14 | 15/15 |
| 1 | 230/460 | 3 | 14/14 | 14/14 | 14/14 | 14/14 | 12/14 | 15/15 |
| 1 1/2 | 230/460 | 3 | 14/14 | 14/14 | 14/14 | 12/14 | 12/14 | 15/15 |
| 2 | 230/460 | 3 | 14/14 | 14/14 | 14/14 | 12/14 | 10/12 | 15/15 |
| 3 | 230/460 | 3 | 14/14 | 14/14 | 14/14 | 12/14 | 10/12 | 15/15 |

(*) Not economical to run in 115V, use 230V.

General Safety Information

Carefully read and follow all safety instructions in this manual and on pump. Keep safety labels in good condition. Replace missing or damaged safety labels.



This is a SAFETY ALERT SYMBOL. When you see this symbol on the pump or in the manual, look for one of the following signal words and be alert to the potential for personal injury or property damage.

▲ DANGER Warns of hazards that WILL cause serious personal injury, death or major property damage if ignored.

▲ WARNING Warns of hazards that CAN cause serious personal injury or death, if ignored.

▲ CAUTION Warns of hazards that MAY cause minor personal injury, product or property damage if ignored.

IMPORTANT: Indicates factors concerned with operation, installation, assembly or maintenance which could result in damage to the machine or equipment if ignored.

NOTE: Indicates special instructions which are important but are not related to hazards.

▲ WARNING



Hazardous voltage. Can shock, burn or cause death. Ground pump before connecting to power supply.

▲ Wire motor for correct voltage. See "Electrical" section and Motor Data Charts C&D of this manual, and motor nameplate.

▲ Ground motor before connecting to power supply.

▲ Meet United States National Electrical Code and local codes for all wiring.

▲ Do not handle a pump or pump motor with wet hands or when standing on a wet or damp surface or in water.

▲ Follow wiring instructions in this manual when connecting to power lines.

▲ WARNING Always disconnect power source before performing any work on or near the motor or its connected load.



Do not use to pump flammable or explosive fluids such as gasoline, fuel oil, kerosene, etc. Do not use in flammable and/or explosive atmospheres.



Hazardous pressure! Install pressure relief valve in discharge pipe. Release all pressure on system before working on any component.

1. Make workshop child proof - use padlocks, master switches; remove starter keys.
2. Wear safety glasses when working with pumps.
3. Wear a face shield and proper apparel when pumping hazardous chemicals.
4. Keep work area clean, uncluttered and properly lighted; replace all unused tools and equipment.
5. Provide guarding around moving parts.
6. Keep visitors at a safe distance from the work area.
7. Periodically inspect pump and system components.
8. Protect electrical cord. Replace or repair damaged or worn cords immediately.

9. Do not insert finger or any object into pump or motor openings.
10. Secure the discharge line before starting the pump. An unsecured discharge line will whip, possibly causing personal injury and/or property damage or puncture.

▲ CAUTION Do not touch an operating motor or engine. They are designed to operate at high temperatures.

▲ WARNING This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

▲ WARNING Risk of Electric Shock. This pump has not been investigated for use in swimming pool areas.
NOTE: Pumps with the "CSA-CUS" mark are tested to UL standard UL778 and certified to CSA standard C22.2 No. 108.

Pre-Installation

HANDLING

1. Use handle supplied to lift pump.
2. Avoid impact on pump or motor. In particular, avoid impact on discharge end of pump or rear motor access cover.

LOCATION

▲ WARNING In any installation where property damage and/or personal injury might result from an inoperative or leaking pump due to power outages, discharge line blockage, or any other reason, a backup system(s) should be used.

1. Locate pump as close to the fluid source as possible, keeping the inlet pipe short as possible.
2. Place unit where the pump and piping are protected from the weather and extremes of heat, humidity and below freezing temperatures.
3. Mount unit in a dry location that is easily accessible for inspection and maintenance. If a dry location is not available, mount it on a foundation well above the wet floor.
4. Allow ample clearance around unit for free air circulation.

SUCTION LIMITATIONS

1. Units are non self-priming.
2. Pressure booster pumps are not recommended for suction lift applications.

PIPING

1. Use galvanized piping, rigid plastic or other suitable pipe that will not collapse under suction or rupture due to pressure.

▲ CAUTION If hose is used, make sure it is the reinforced industrial type that is rated higher than the shutoff pressure of the system. Ordinary garden hose will collapse and starve the pump of water.

2. The diameter of the inlet and discharge pipe should be no smaller than the corresponding ports of the pump (See Figure 1). Smaller pipe will reduce the capacity of the pump. Increase pipe size on long runs.
3. Avoid air pockets in inlet piping or air will accumulate at high points, making priming difficult.
4. Use pipe compound on all joints and connections. Use Teflon tape or plastic joint stik, on plastic pipe. Draw all pipe up tightly.

IMPORTANT: The entire system must be air and water tight for efficient/proper operation.

Installation
PUMP INSTALLATION

IMPORTANT: Pump is built to handle clear water only; it is not designed to handle water containing sand, silt or other abrasives.

1. Refer to Figures 6, 7, and 8 for typical installations.

CAUTION Support pump and piping when assembling and when installed. Failure to do so may cause piping to break, pump to fail, motor bearing failures, etc.

2. If the pump is used as part of a permanent installation, bolt to a rigid foundation.

WARNING Use only components that are rated for maximum pressure pump can produce when used in boosting system or any other system. Do not exceed the total maximum pressure boost as listed per model in Performance Charts B.

PRESSURE BOOST SYSTEMS

1. On pressure boost systems, locate the pump so that there will always be a positive supply of water to the pump (See Figures 6, 7 and 8).
2. For service convenience, install a gate valve and union in the inlet and discharge line.

CAUTION Do not use a globe valve or other restricting type of valve that will seriously restrict the pumps discharge capacity.

3. Install a check valve as shown in Figure 6. Be sure check valve flow arrows point in the direction of water flow.
4. Whenever dirt, sand or debris is present in the supply water, install a strainer or filter on the inlet side of the pump (See Figure 7).

NOTE: For heavy amounts of sediment, install a trap filter on the inlet side of the pump (See Figure 5).

NOTE: Pressure gauges installed before and after the filter will show pressure differential indicating the need for filter replacement or cleaning.

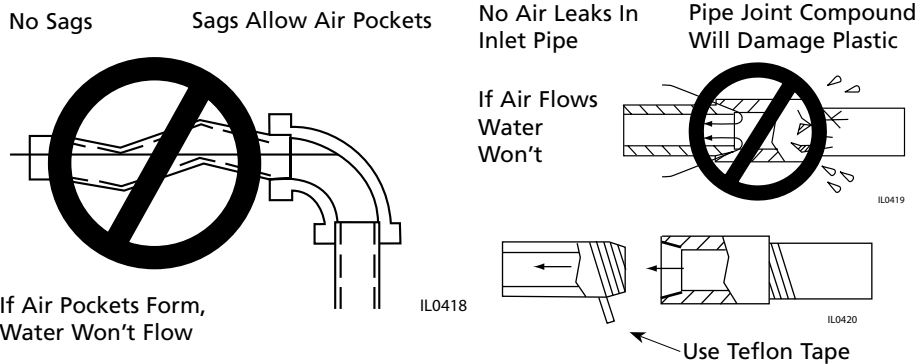


Figure 2 - No Air Pockets in Inlet Pipe

Figure 3 - Inlet Pipe Must Not Leak

CAUTION Mount pump in correct position or pump failure will result.

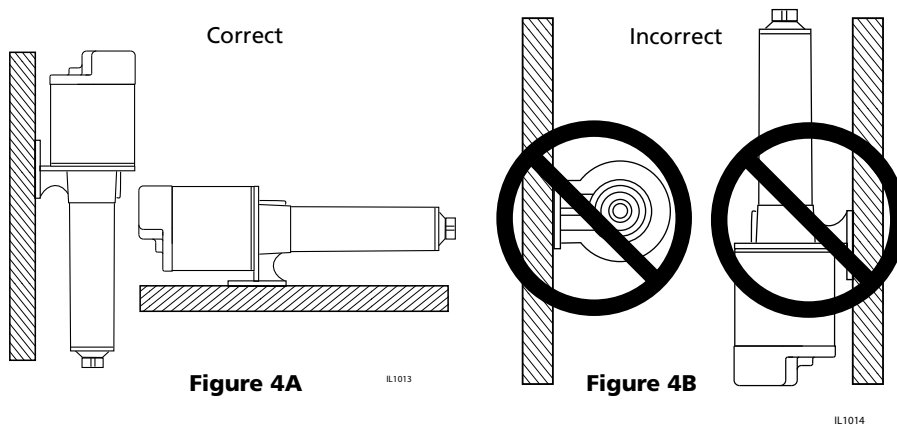


Figure 4A

Figure 4B

SAND AND SEDIMENT TRAP FILTER

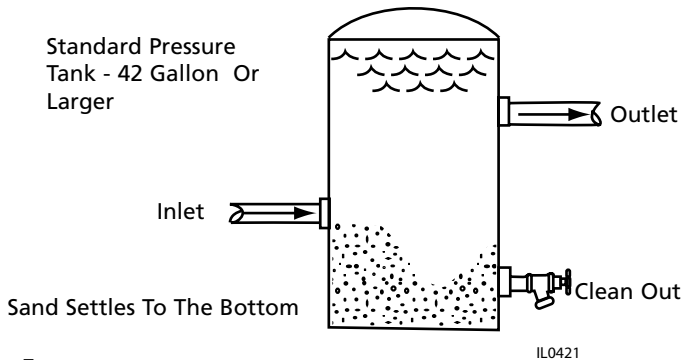


Figure 5

IMPORTANT: Clean all filters and strainers on a regular schedule.

Installation (Continued)

- A pressure gauge installed in the inlet pipe close to the inlet port, (See Figure 6) will show if enough water is being supplied to the pump. See Operation Section - Priming, Pressure Boost Installations.
- On installations that are using nozzles for mist spraying, install a filter in the discharge plumbing to prevent the nozzles from becoming plugged. Multiple filters should be plumbed in parallel.

WARNING Install a pressure relief valve on any installation where pump pressure can exceed the pressure tank's maximum working pressure or on systems where the discharge line can be shut off or obstructed. Extreme over pressure can result in personal injury or property damage.

CAUTION This unit is not waterproof and is not intended to be used in showers, saunas or other potentially wet locations. The motor is designed to be used in a clean dry location with access to an adequate supply of cooling air. Ambient temperature around the motor should not exceed 104°F (40°C). For outdoor installations, motor must be protected by a cover that does not block airflow to and around the motor. This unit is not weatherproof nor is it able to be submerged in water or any other liquid.

WARNING To avoid dangerous or fatal electrical shock, turn off power to motor before working on electrical connections.

WARNING Supply voltage must be within $\pm 10\%$ of nameplate voltage. Incorrect voltage can cause fire or seriously damage motor and voids warranty. If in doubt, consult a licensed electrician.

WARNING Use wire size specified in wiring Chart F. If possible, connect pump to a separate branch circuit with no other appliances on it. If motor wiring diagram differs from diagram shown below, follow diagram on motor.

Pump used to boost incoming city pressure (automatic operation).

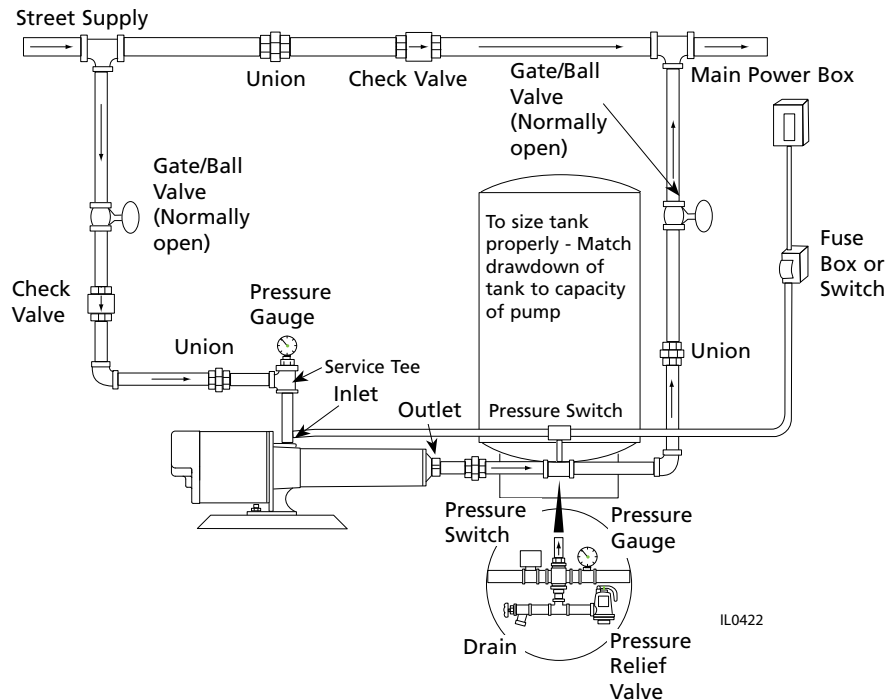


Figure 6

IMPORTANT: A contained air pressure tank and pressure switch is required to keep the pump from rapid cycling and prevent the motor from over heating. Install the tank and switch on the house side of system.

Pump used to boost water pressure in mist spray applications (automatic operation).

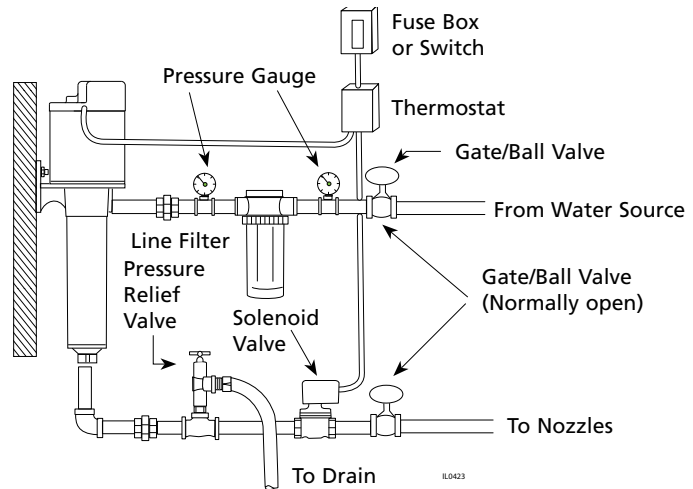


Figure 7

NOTE: Install solenoid valve on discharge side of pump.

IMPORTANT: Clean all filters and strainers on a regular schedule.

Installation (Continued)

⚠ WARNING



Hazardous voltage. Can shock, burn or cause death.
Ground pump before connecting to power supply.



Ground motor before connecting to electrical power supply.



Failure to ground motor can cause severe or fatal electrical shock hazard.



Do not ground to a gas supply line.

⚠ CAUTION

Proper rotation of pump impeller is critical on three phase motors. See Motor Rotation under Operation section and Figure 12.

WIRING

1. Install, ground, wire and maintain this pump in accordance with your local electrical code and all other codes and ordinances that apply. Consult your local building inspector for local code information.
2. Ground the pump permanently using a wire of size and type specified by local or United States National Electrical Code. **Do not ground to a gas supply line.**
3. Connect ground wire first. Connect to ground first, then to green grounding terminal provided on the motor frame, identified as GRD. Ground connection **MUST** be made to this terminal. Do not connect motor to electrical power supply until unit is permanently grounded; otherwise serious or fatal electrical shock hazard may be caused.
4. Connect the other end of the ground wire to a properly grounded service panel or to a control panel ground bar if it is connected to the power supply ground.

IMPORTANT: Check local and/or United States National Electric Codes for proper grounding information.

⚠ CAUTION

Make certain that the power supply conforms to the electrical specifications of the motor supplied. See Motor Data Charts.

Pump used to boost incoming pressure from a wall hydrant (manual operation).



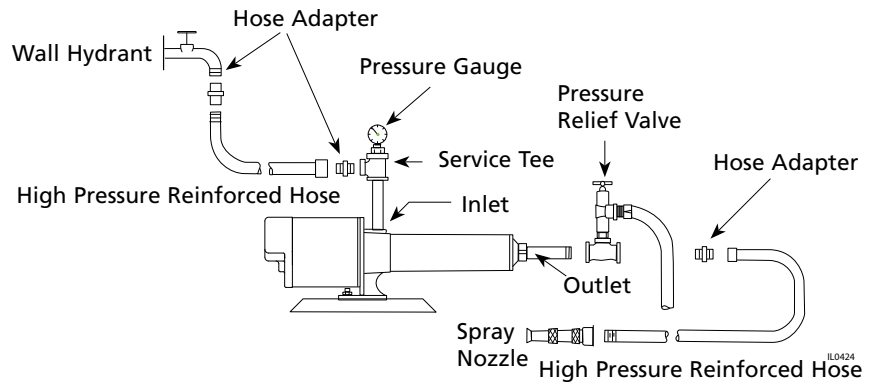


Figure 8

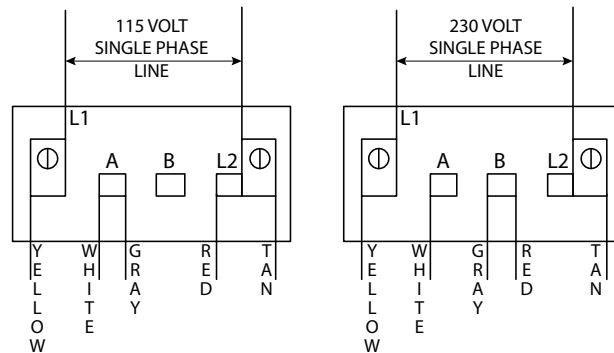

NOTE: Dual voltage motors, change the red and gray wire to the voltage required.

Figure 9 - Wiring Diagram for Single Phase 1/3 - 2 HP Motors

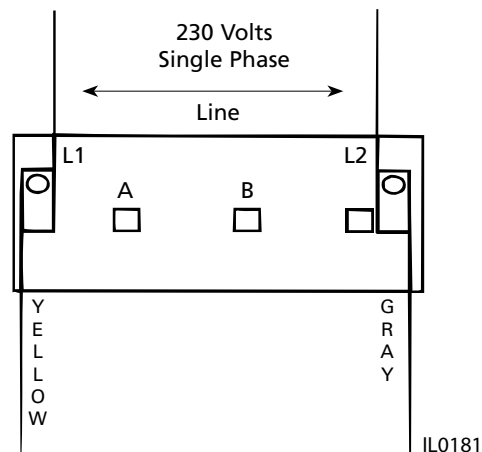


NOTE: Single voltage (230V) motor, and can not be connected to 115V.

Figure 10 - Wiring Diagram for Single Phase 3 HP Motors

Installation (Continued)


3 Phase

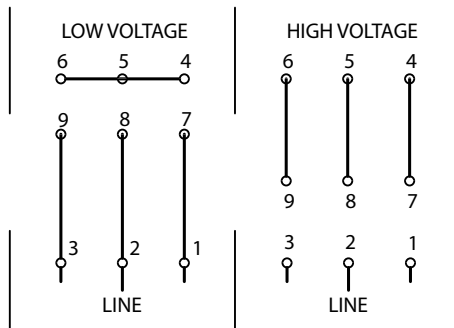

IL1229

Figure 11 - Wiring Diagram for Baldor TEFC 3 Phase motors

3 Phase

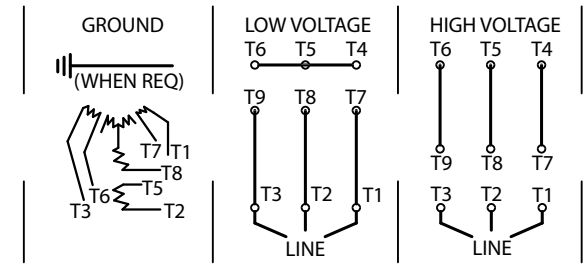


IL1231

Figure 13 - Wiring Diagram for Marathon TEFC 3 Phase motors

3 Phase

1 Phase

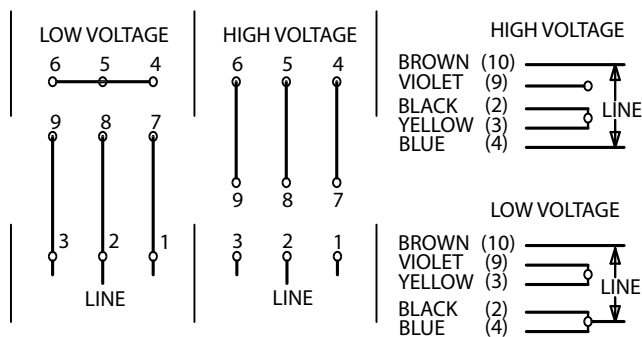


IL1230

Figure 12 - Wiring Diagram for Franklin Electric TEFC 1 Phase and 3 Phase motors

LOW VOLTAGE 230V

3-Ø

HIGH VOLTAGE 460 V

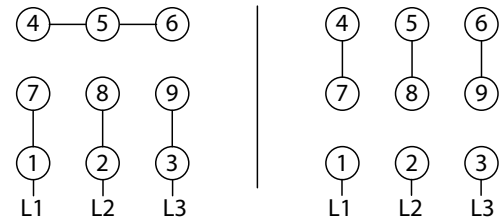

IL0770

- | | | |
|------------|------------|------------|
| 1 - Tan | 4 - Yellow | 7 - Purple |
| 2 - Red | 5 - Black | 8 - Gray |
| 3 - Orange | 6 - Blue | 9 - White |

CONNECTION FOR 3 PHASE, 9 LEADS. IF YOUR 3 PHASE LEADS ARE COLOR CODED, MATCH NUMBER ABOVE TO THE CORRESPONDING COLOR.

NOTE: To reverse rotation, interchange any two incoming lines (Power) leads.

Figure 14 - Wiring Diagram for Three Phase Motors

Installation (Continued)

5. **Specific Wiring Procedure** (Refer to Figures 9, 10, 11, 12, 13, 14 and Minimum Wire Size Chart).

- Select the voltage you are to use, either 115V or 230V single phase, 230V or 460V three phase.
 - The 1/3, 1/2 and 3/4 HP single phase pumps are factory connected for 115V at the motor. The 1, 1 1/2, 2 and 3 HP pumps are factory connected for 230V at the motor. Three phase models are factory connected for 230V at the motor.
 - If the motor wiring must be changed to conform to your specific voltage requirements then the motor, pressure switch or other controls should be rewired to conform to one of the wiring diagrams (either 115V or 230V, single phase; 230V or 460V, three phase). Single phase 3 HP motors are 230V only and cannot be wired for 115V service.
 - The motor wiring diagrams are Figures 9, 10, 11, 12, 13 & 14, and also are located on the motor label of the pump.
6. Remove the rear access cover of the motor.
7. Make the wiring change and replace the rear access cover.

⚠ WARNING *Replace rear access cover before starting or operating pump. Failure to do so can result in personal injury.*

IMPORTANT: Do not use an extension cord or splice wires. Joints should be made in an approved junction box. If the above information or the following wiring diagrams are confusing, consult a licensed electrician.

8. All units are **not supplied** with pressure switches, float devices, on/off switches, or the like (control devices). Controls should be wired in at this time, utilizing whatever instructions come with the controls. All units supplied with cords, will run whenever cord is plugged into power and will turn off whenever cord is disconnected from power.

MOTOR PROTECTION

All single phase motors have built in thermal protection for all voltages. The overload protects the motor against burn-out from overload of low voltage, high voltage and other causes. The device is automatic and resets itself once the temperature has dropped to a safe point. Frequent tripping of the device indicates trouble in the motor or power lines and immediate attention is needed.

⚠ WARNING *Never examine, make wiring changes or touch the motor before disconnecting the main electrical supply switch. The thermal device may have opened the electrical circuit.*

Three phase motors do not have a built in thermal protection. It is recommended that a properly sized magnetic or manual starter (both with properly sized heaters) be used with all three phase motors. Install starters following instructions of the starter manufacturer. See Motor Rotation under Operation Section for changing rotation on three phase motors.

All motors (single and three phase) should be equipped with a correctly fused disconnect switch to provide protection. Consult local or United States National Electric Codes for proper fuse protection based on motor data chart (See Charts C, D and Wire chart F).

Operation

⚠ CAUTION *Unit must be full of fluid before operating. Do not run dry, or against a closed discharge. Do not pump dirty water or abrasive liquids. To do so will cause pump failure and will void the warranty.*

VALVES

The inlet valve should be in the full open position and the discharge valve should be partially open, permitting some back pressure to be exerted against the pump when starting up. Open valve after start up is completed.

PRIMING

NOTE: Before starting the pump it is absolutely necessary that **both the pump and the inlet pipe be completely filled with water.**

PRESSURE BOOST INSTALLATIONS

Priming is automatic when pump is connected to a pressure source such as a hydrant or city main (See Figures 6, 7 & 8).

- Open valves or nozzle on inlet and discharge side of pump.
- To relieve trapped air, allow water supply to run a minimum of 30 seconds before starting the pump.

IMPORTANT: An adequate flow of water going into the pump is required so that the pumps impellers and shaft seal do not run dry and fail.

- If you installed a pressure gauge at the pump inlet, a reading of 2 psi minimum should show whenever the pump is in operation (See Figures 6, 7 & 8).

This reading insures that there is an ample supply of water into the pump inlet housing.

MOTOR/PUMP ROTATION

- Single phase models are one (1) rotation only (counterclockwise when facing the pump end) and cannot be reversed.
- Proper rotation of pump impeller is critical for three phase pumps. Pump motor should turn counterclockwise (CCW) when facing pump end. Momentarily "bump" (apply power for less than a second) the motor to check for proper rotation. To change rotation on three phase units, interchange any two (2) incoming line (power) leads.

⚠ CAUTION *Do not go over recommended maximum operating pressure (see Specifications), while maintaining minimum flow of 1.5 GPM thru the pump. Do not restrict the inlet line to the pump.*


If driver (electric motor) is overloaded, a valve can be installed in the discharge line to increase the back pressure and reduce driver loading.

Operation (Continued)

START - UP PROCEDURE

Once the preceding instructions have been completed, the pump can be started.

1. During the first few hours of operation, inspect the pump, piping and any auxiliary equipment used in connection with the unit.
2. Check for leaks, excessive vibration or unusual noises.

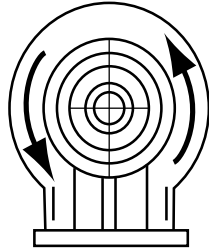

IL0539

Figure 15 - Correct Motor/Pump Rotation (all units)

NOTE: See rotation arrow on inlet casting.

Maintenance

CAUTION Disconnect power supply and depressurize system before servicing pump or removing any component.

ROUTINE

Pump should be checked routinely for proper operation. Replace or clean all filters and line strainers on a regular basis.

DRAINING

This pump cannot be completely drained because of internal design. Most of the liquid can be drained by tilting the discharge forward after removing discharge casting; or, the liquid can be drained through the inlet port. Store in heated areas.

CLEANING

If used for spraying insecticides, pump should be thoroughly flushed with clean water after using.

LUBRICATION

The motor has prelubricated bearings. No lubrication is required.

SERVICING THREE-PHASE UNITS

Loctite (thread sealer) is used on the threads between the motor shaft and the pump shaft coupling. When reassembling, reapply thread sealer.

PUMP DISASSEMBLY

To disassemble the pump, refer to the exploded parts view and Figures 16, 17 & 18

Tools Required:

- Block of wood (2" x 4" x 12")
- Piece of 3/4" pipe (12" to 24" long)
- Pipe wrench
- Strap wrench
- 1/4" Dowel rod (about 24" long)
- 9/16" Open end wrench
- 3/8" Open end wrench

1. To stabilize pump during disassembly, place block of wood underneath pump barrel.
2. Thread pipe into pump inlet port. This acts as a handle.
3. Using the pipe wrench, remove the discharge head, turning CCW (counter clockwise).
4. With the strap wrench, loosen the barrel, turning CCW (counter clockwise). DO NOT use pipe wrench on pump

barrel.

5. Holding the impeller stack in place, position pump in upright position, standing unit on the motor end cover.
6. Use the 1/4" dowel rod to hold the stages down and in place on the pump shaft. Remove pump barrel.
7. Slide the stages off the pump shaft onto the 1/4" dowel rod. Leave stages on rod and carefully set aside.

NOTE: There may be some small .010" shim washers located next to the pump shaft coupling. Keep these shims for re-assembly.

8. Through the side opening of the mounting frame, hold the motor shaft with 9/16" wrench. Remove the shaft and coupling from the motor using the 3/8" wrench on the hex shaped pump shaft.

NOTE: If the hex shaft comes free, leaving the coupling attached to the motor, use vise grips to free the coupling.

MECHANICAL SEAL REPLACEMENT

1. Follow instructions under "Pump Disassembly".

2. Remove the mechanical seal assembly.

- a. The rotary portion of the seal assembly (carbon ring, Buna-N gasket and spring will slide easily off the end of shaft).
- b. Using two (2) screwdrivers, pry the ceramic seal and rubber gasket from the recess of the mounting ring (See Figure 16).

CAUTION The precision lapped faces of the mechanical seal are easily damaged. Handle the replacement seal carefully. Short seal life will result if seal faces (ceramic & carbon) are nicked, scratched or dirty.

3. Clean the seal cavity of the mounting ring and the motor thoroughly.
4. Wet outer edge of rubber cup on ceramic seat with liquid soap solution. Use sparingly (one drop only).

NOTE: Liquid soap solution - one drop of liquid soap combined with one teaspoonful of water.

5. With thumb pressure, press ceramic seal half firmly and squarely into seal cavity. Polished face of ceramic seat is up. If seal will not seat correctly, remove, placing seal face up on bench. Reclean cavity. Seal should now seat correctly (See Figure 17).
6. If seal does not seat correctly after recleaning cavity, place a cardboard washer over polished seal face and carefully press into place using a piece of standard clean 3/4" pipe as a press (See Figure 18).

Maintenance (Continued)

IMPORTANT: Do not scratch seal face.

7. Dispose of cardboard washer and recheck seal face to be sure it is free of dirt, foreign particles, scratches and grease.
8. Inspect shaft to be sure it is free of nicks and scratches.
9. Apply liquid soap solution sparingly (one drop is sufficient) to inside diameter of rubber rotating member.
10. Slide rotating seal member (carbon face down toward ceramic face) and spring over the shaft.

IMPORTANT: Do not nick or scratch carbon face of seal when handling.

MOTOR REPLACEMENT

The motor can be replaced with any standard Nema 56J jet pump motor (of proper HP for each pump) by referring to the following instructions.

1. Follow steps as outlined under Rotary Seal Replacement and Pump Disassembly.
2. Remove cap screws that connect the motor to the mounting ring and pull motor away.
3. Replace motor with standard Nema 56J jet pump motor by positioning motor against the mounting frame and assembling with four (4) cap screws.

IMPORTANT: Because damage to the shaft seal can occur in disassembly, a new seal will be necessary.

PUMP REASSEMBLY

Before reassembling the pump, carefully inspect the component parts of the cartridge (stage) assembly, looking for damage, wear or heat distortion. Pay careful attention to spacing direction of components, and location of shims. Refer to Figure 19 for proper facing and parts arrangement.

If damage to Stage components is evident, a complete cartridge assembly or individual stage assemblies are available for replacement (See Replacement Parts List).


1. Reassembly should follow the reverse order of the disassembly procedure with special care given to replacement of the rotary seal.
2. Check top and bottom of o-rings for damage. It is recommended that new o-rings be used.
3. Do not use pipe compound or Teflon tape on barrel threads. The o-rings will prevent pump from leaking.
4. After pump is reassembled, tighten the discharge head to a torque of 45-50 ft/lbs. If torque wrench is not available, tighten firmly but avoid distortion or damage to plastic internal parts.
5. After reassembly, apply power momentarily to unit (15 to 30 seconds). The pump and motor should rotate freely or with a light rubbing.



Figure 16 - Remove Mechanical Seal



Figure 17 - Press In Seal

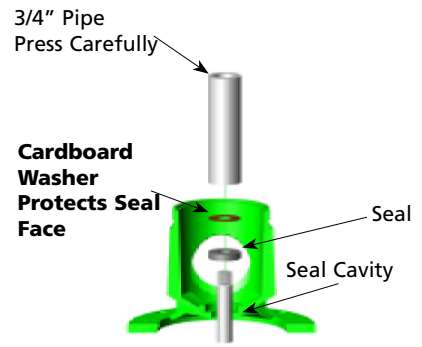


IL0554

Figure 18 - If Necessary, Press With Cardboard And Pipe

| Troubleshooting Chart | | |
|--|--|---|
| Symptom | Possible Cause(s) | Corrective Action |
| Pump won't start or run at full speed | <ol style="list-style-type: none"> 1. Blown fuse or open circuit breaker 2. Power supply in OFF position 3. Incorrect voltage at motor (check voltage with motor running) 4. Loose, broken or incorrect wiring 5. Defective motor 6. Pump hydraulic components clogged/worn/damaged | <ol style="list-style-type: none"> 1. Replace fuse or close circuit breaker. See wire size chart for proper break/fuse size 2. Turn power on 3. Low voltage <ol style="list-style-type: none"> a. Voltage must be within $\pm 10\%$ of motor rated voltage. Check incoming voltage. Contact power company b. Make certain that voltage of motor matches voltage of power supply. See motor name plate and motor wiring diagrams c. Check wire size from main switch to pump. See wire size chart for correct wire size 4. Rewire any incorrect circuits. Tighten connections, replace defective wires 5. Replace motor 6. Replace worn parts or entire pump. Clean parts if required |
| Pump operates, but delivers little or no water | <ol style="list-style-type: none"> 1. Manual or solenoid valves plumbed into system restricting flow 2. In-line filter restricting flow 3. Low line voltage 4. Inadequate water supply to booster pump 5. Undersized piping 6. Leak on inlet side of system 7. Inadequate, defective or plugged foot valve and/or strainer 8. Worn or defective pump parts or pump. 9. Suction lift too great 10. Pump not primed 11. Incorrect rotation, motor running backwards | <ol style="list-style-type: none"> 1. <ol style="list-style-type: none"> a. Check all valves on pump inlet and discharge sides of system to be sure they are opened properly to allow flow to and from the pump b. Bleed trapped air in pump which keeps water from reaching the pump. (Normally due to closed valve in discharge plumbing) 2. Check all in-line filters to be sure they are not plugged or restricted 3. See low line voltage corrective action (above) 4. Check pressure on inlet side of booster to be sure positive pressure is maintained to the booster pump 5. Replace undersized piping 6. Make sure connections are tight. Repair leaks as necessary 7. Clean, repair or replace as needed 8. Replace worn parts or entire plugged impeller Clean parts if 9. Pump should be operated under flooded suction only 10. Prime pump - Make certain inlet pipe is drawn up tight and pump and pipe are full of water 11. Reverse motor rotation can occur on three phase units. To correct, interchange any two incoming power leads. |
| Excessive noise while pump in | <ol style="list-style-type: none"> 1. Pump not secured to firm foundation 2. Piping not supported 3. Restricted inlet line 4. Cavitation (noise like marbles in pump) 5. Worn motor bearings | <ol style="list-style-type: none"> 1. Secure properly 2. Make necessary adjustments 3. Clean or correct 4. <ol style="list-style-type: none"> a. Reduce speed on direct drive b. Increase inlet pipe size c. Too viscous (material being pumped too thick) 5. Replace bearings or motor |
| Pump leaks | <ol style="list-style-type: none"> 1. Worn mechanical seal (leaks at shaft) 2. Worn o-ring seals | <ol style="list-style-type: none"> 1. Replace shaft (rotary) seal 2. Replace o-ring seals, located inside both ends of the stainless steel shell |

Booster Pump Parts Drawing

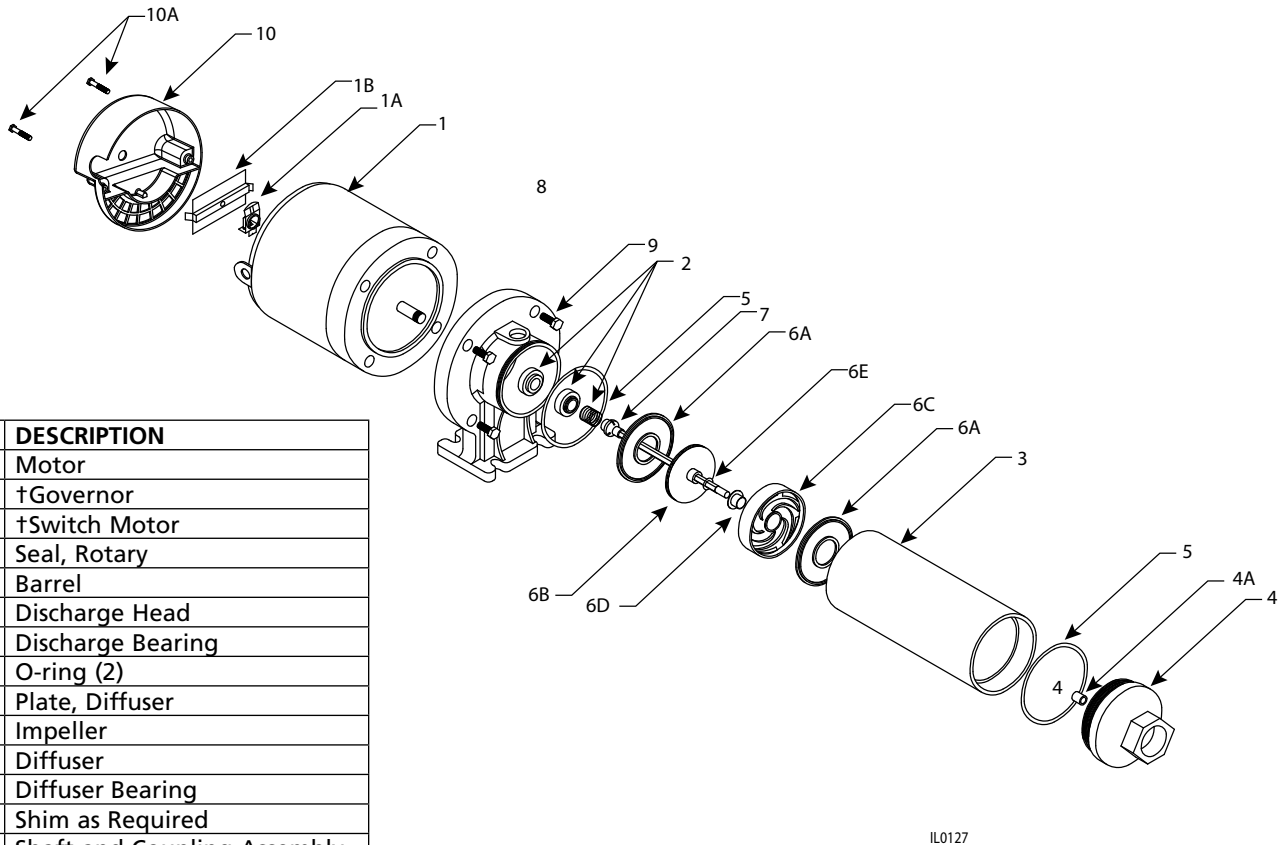

| ITEM NO. | DESCRIPTION |
|----------|-----------------------------|
| 1 | Motor |
| 1A | †Governor |
| 1B | †Switch Motor |
| 2 | Seal, Rotary |
| 3 | Barrel |
| 4 | Discharge Head |
| 4A | Discharge Bearing |
| 5 | O-ring (2) |
| 6A | Plate, Diffuser |
| 6B | Impeller |
| 6C | Diffuser |
| 6D | Diffuser Bearing |
| 6E | Shim as Required |
| 7 | Shaft and Coupling Assembly |
| 8 | Mounting Ring |
| 9 | Hex Head Bolts (4) |
| 10 | †Motor Access Cover |
| 10A | †Screws, Access Cover (2) |

Figure 19

*See note below parts included in cartridge assembly.
 †ODP Motor Only

Internal Parts Detail


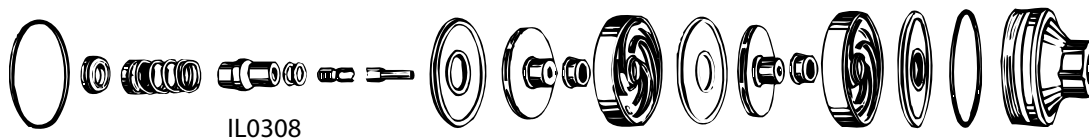


Figure 20 - Cartridge Assembly Includes Discharge Bearing, Shaft & Coupling Assembly, Diffuser Plate, Impellers, Diffuser Bearings, Diffusers and O-rings

NOTE: Illustration shows only two stages. Pump has multiple stages. Individual parts are not available separately.

PRESSURE BOOSTER PUMP REPAIR PARTS
(For Pricing Refer To Repair Parts Price List)
Replacement Motors

FORM NO. FW0045
 0813
 SUPERSEDES 0208

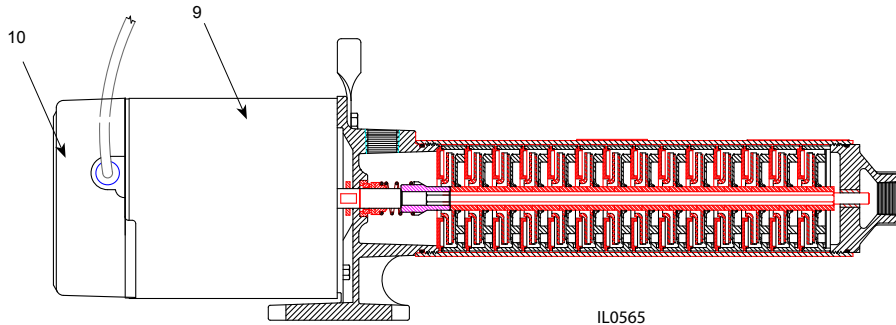


IL0565

| ITEM | REPLACEMENT MOTORS | QTY | CAST IRON | POWDER COATED | STAINLESS STEEL | CAST IRON | POWDER COATED | STAINLESS STEEL |
|------|----------------------|-----|------------------------------|---------------|-----------------|-----------------------------|---------------|-----------------|
| | | | SINGLE PHASE 60 HZ | | | THREE PHASE 60 HZ | | |
| 9 | ODP NEMA J 1/3 HP | 1 | 98J103 | 98J103 | 98S103 | | | |
| | ODP NEMA J 1/2 HP | | 98J105 | 98J105 | 98S105 | 98J305 | 98J305 | 98S305 |
| | ODP NEMA J 3/4 HP | | 98J107 | 98J107 | 98S107 | 98J307 | 98J307 | 98S307 |
| | ODP NEMA J 1 HP | | 98J110 | 98J110 | 98S110 | 98J310 | 98J310 | 98S310 |
| | ODP NEMA J 1-1/2 HP | | 98J115 | 98J115 | 98S115 | 98J315 | 98J315 | 98S315 |
| | ODP NEMA J 2 HP | | 98J120 | 98J120 | 98S120 | 98J320 | 98J320 | 98S320 |
| 10 | Motor Cover w/Screws | 1 | 136132R | 136132R | 136132R | 136132R | 136132R | 136132R |
| * | Screws, Motor Cover | 2 | 136133 | 136133 | 136133 | 136133 | 136133 | 136133 |
| | | | SINGLE PHASE 50 HZ | | | THREE PHASE 60/50 HZ | | |
| 9 | ODP NEMA J 1/3 HP | 1 | 98J003 | 98J003 | 98S003 | | | |
| | ODP NEMA J 1/2 HP | | 98J005 | 98J005 | 98S005 | 98J305 | 98J305 | 98S305 |
| | ODP NEMA J 3/4 HP | | 98J007 | 98J007 | 98S007 | 98J307 | 98J307 | 98S307 |
| | ODP NEMA J 1 HP | | 98J010 | 98J010 | 98S010 | 98J310 | 98J310 | 98S310 |
| | ODP NEMA J 1-1/2 HP | | 98J015 | 98J015 | 98S015 | 98J315 | 98J315 | 98S315 |
| | ODP NEMA J 2 HP | | 98J820 | 98J820 | 98S820 | 98J320 | 98J320 | 98S320 |
| 10 | Motor Cover w/Screws | 1 | 136132R | 136132R | 136132R | 136132R | 136132R | 136132R |
| * | Screws, Motor Cover | 2 | 136133 | 136133 | 136133 | 136133 | 136133 | 136133 |
| | | | SINGLE PHASE 60/50 HZ | | | THREE PHASE 60/50 HZ | | |
| 9 | TEFC NEMA J 1/2 HP | 1 | | 020691 | 020691 | | 021011 | 021011 |
| | TEFC NEMA J 3/4 HP | | | 021008 | 021008 | | 021012 | 021012 |
| | TEFC NEMA J 1 HP | | | 021009 | 021009 | | 020688 | 020688 |
| | TEFC NEMA J 1-1/2 HP | | | 020692 | 020692 | | 020647 | 020647 |
| | TEFC NEMA J 2 HP | | | 020693 | 020693 | | 020689 | 020689 |
| | TEFC NEMA J 3 HP | | | 021010 | 021010 | | 020690 | 020690 |

* Not Shown

PRESSURE BOOSTER PUMP REPAIR PARTS

(For Pricing Refer To Repair Parts Price List)

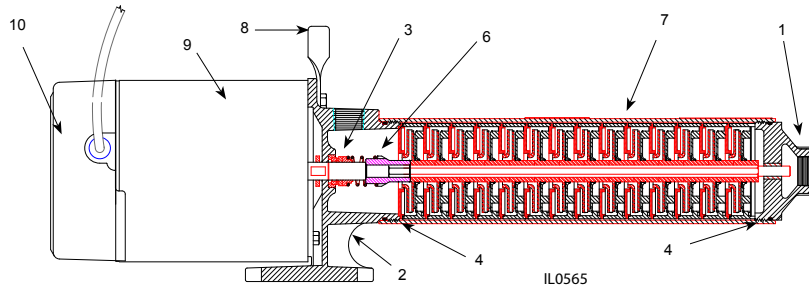

| | ITEM | DESCRIPTION | QTY | CAST IRON | POWDER COATED | STAINLESS STEEL | |
|---|------|---------------------------------|-----|-----------|---------------|-----------------|---|
| 5 - 7 - 10 - 19 GPM, 60 HZ & 50 HZ | 1 | Discharge Head 3/4" NPT | 1 | 132000 | 136905 | 136640 | See replacement motors. ITEMS 9 & 10 |
| | 2 | Mounting Ring 3/4" NPT | 1 | 132002 | 136904 | 136639 | |
| 27 - 35 GPM, 60 HZ & 50 HZ | 1 | Discharge Head 1" NPT | 1 | 136635 | 137796 | 139166 | |
| | 2 | Mounting Ring 1" NPT | 1 | 136634 | 137794 | 139100 | |
| 55 - 85 GPM, 60 HZ & 50 HZ | 1 | Discharge Head 2" NPT | 1 | 021585 | - | - | |
| | 2 | Mounting Ring 2" NPT | 1 | 021584 | - | - | |
| ALL SERIES 60 HZ & 50 HZ | 3 | Seal, Rotary w/Spring | 1 | 131100 † | 131100 † | 136682 ‡ | |
| | 4 | O-Ring | 2 | 131925 ■ | 131925 ■ | 136607 ▲ | |
| | * | Hex Head Cap Screws 3/8" x 3/4" | 4 | 121106 | 121106 | 121106 | |
| | | | | | | | |

(†) Buna N - Carbon/Silicon Carbide (‡) Viton - Carbon/Silicon Carbide (■) Buna N (▲) Viton (*) Not Shown
(8) 132079 Handle available as an option

| 60 HZ MODELS | MATERIAL | CAST IRON | CI | PB0508AXXX | PB0512AXXX | PB0516AXXX | PB0712AXXX | PB1014AXXX | PB1016AXXX |
|--------------|---------------------------|-----------------|----------|-------------|------------|------------|------------|------------|------------|
| | | POWDER COATED | PC | PB0508CXXX | PB0512CXXX | PB0516CXXX | PB0712AXXX | PB1014CXXX | PB1016CXXX |
| | | STAINLESS STEEL | SS | PB0508SXXX | PB0512SXXX | PB0516SXXX | PB0712SXXX | PB1014SXXX | PB1016SXXX |
| | ITEM | DESCRIPTION | MATERIAL | PART NUMBER | | | | | |
| 5 | Cartridge Assembly ‡ | CI & PC | 135163 | 132939 | 138447 | 134097 | 134998 | 135814 | |
| | | | SS | 136683 | 138450 | 136684 | 136685 | 136686 | |
| 6 | Shaft & Coupling Assembly | CI & PC | 135161 | 133336 | 138446 | 133336 | 134996 | 135813 | |
| | | | SS | 138938 | 136636 | 138449 | 136636 | 136637 | 136638 |
| 7 | Barrel/Shell | CI, PC & SS | 135162 | 132003 | 138448 | 132003 | 134997 | 135815 | |
| 60 HZ MODELS | MATERIAL | CAST IRON | CI | PB1914AXXX | PB2711AXXX | PB2714AXXX | PB3506AXXX | PB3508AXXX | |
| | | POWDER COATED | PC | PB1914CXXX | PB2711CXXX | PB2714CXXX | PB3506CXXX | PB3508CXXX | |
| | | STAINLESS STEEL | SS | PB1914SXXX | PB2711SXXX | PB2714SXXX | PB3506SXXX | PB3508SXXX | |
| | ITEM | DESCRIPTION | MATERIAL | PART NUMBER | | | | | |
| 5 | Cartridge Assembly ‡ | CI & PC | 137222 | 135627 | 136629 | 136626 | 136632 | | |
| | | | SS | 139162 | 139163 | 138946 | 139164 | 139165 | |
| 6 | Shaft & Coupling Assembly | CI & PC | 137221 | 136624 | 136628 | 136625 | 136631 | | |
| | | | SS | 139159 | 139157 | 137535 | 139156 | 139158 | |
| 7 | Barrel/Shell | CI, PC & SS | 137223 | 135628 | 136630 | 136627 | 136633 | | |
| 60 HZ MODELS | MATERIAL | CAST IRON | CI | PB5504XX | PB5506XX | PB8504XX | PB8505XX | | |
| | | POWDER COATED | PC | | | | | | |
| | | STAINLESS STEEL | SS | | | | | | |
| | ITEM | DESCRIPTION | MATERIAL | PART NUMBER | | | | | |
| 5 | Cartridge Assembly ‡ | CI | 022293 | 022294 | 022295 | 022296 | | | |
| | | | SS | 022289 | 022287 | 022288 | 022287 | | |
| 6 | Shaft & Coupling Assembly | CI | 022289 | 022287 | 022288 | 022287 | | | |
| | | | SS | 022291 | 022292 | 138151 | 022290 | | |
| 7 | Barrel/Shell | CI, PC & SS | 022291 | 022292 | 138151 | 022290 | | | |

| 50 HZ MODELS | MATERIAL | CAST IRON | CI | PB0508XXXX | PB0514XXXX | PB0714XXXX | PB1020XXXX | PB1022XXXX | PB1023XXXX |
|--------------|---------------------------|-----------------|----------|-------------|------------|------------|-------------|------------|------------|
| | | POWDER COATED | PC | PB0508ZXXX | PB0514ZXXX | PB0714ZXXX | PB1020ZXXX | PB1022ZXXX | PB1023ZXXX |
| | | STAINLESS STEEL | SS | PB0508YXXX | PB0514YXXX | PB0714YXXX | PB1020YXXX | PB1022YXXX | PB1023YXXX |
| | ITEM | DESCRIPTION | MATERIAL | PART NUMBER | | | | | |
| 5 | Cartridge Assembly ‡ | CI & PC | 135163 | 138150 | 021032 | 135907 | 135911 | | |
| | | | SS | 138682 | 021033 | 138683 | 020280 | 138684 | |
| 6 | Shaft & Coupling Assembly | CI & PC | 135161 | 138149 | 138149 | 135906 | 020278 | 135910 | |
| | | | SS | 138938 | 138444 | 138444 | 138154 | 020278 | 137103 |
| 7 | Barrel | CI, PC & SS | 135162 | 138151 | 138151 | 135098 | 020094 | 135912 | |
| 50 HZ MODELS | MATERIAL | CAST IRON | CI | PB1920XXXX | PB2717XXXX | PB3508XXXX | PB3514XXXXT | | |
| | | POWDER COATED | PC | PB1920ZXXX | PB2717ZXXX | PB3508ZXXX | PB3514ZXXXT | | |
| | | STAINLESS STEEL | SS | PB1920YXXX | PB2717YXXX | PB3508YXXX | PB3514YXXXT | | |
| | ITEM | DESCRIPTION | MATERIAL | PART NUMBER | | | | | |
| 5 | Cartridge Assembly ‡ | CI & PC | 020982 | 020980 | 136632 | 021017 | 139435 | | |
| | | | SS | 020095 | 138949 | 139165 | 021026 | * | |
| 6 | Shaft & Coupling Assembly | CI & PC | 020971 | 020916 | 136631 | 021015 | 139434 | | |
| | | | SS | 020093 | 138948 | 139158 | 021020 | 021425 | |
| 7 | Barrel | CI, PC & SS | 020094 | 138947 | 136633 | 021016 | 139436 | | |

(‡) Cartridge assembly includes: impellers, diffusers, o-rings and shaft & coupling assembly. Components not available individually. Sold as assembly only.