

Prep Unit featuring General Pump

DU PMTS2021-5

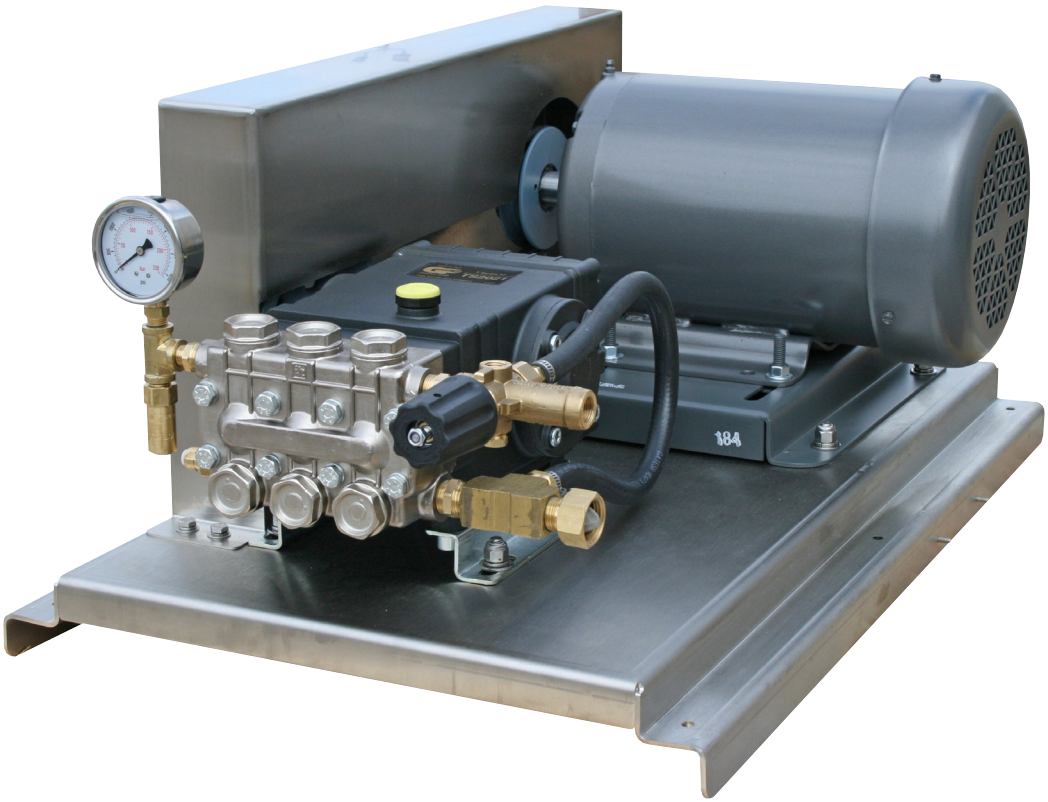

Owner's Manual #0807 022111	
Customer Number:	**Serial Number:**
Model Number:	**Installation Date:**

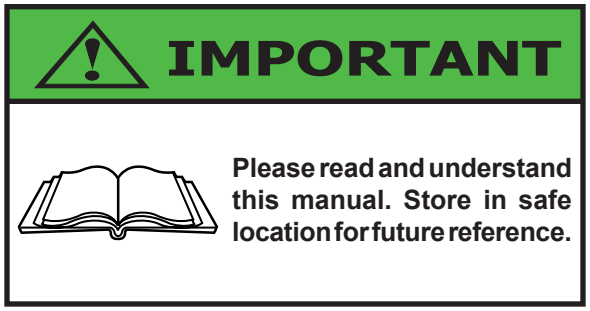

Everyone who operates this unit should understand basic operations and safety precautions! The time you take to fully understand the proper installation, maintenance and use of the machine will prolong its service life, and assure you of trouble free operation.

When unpacking, check to make sure all the parts shown on the Parts Breakdown near the end of this manual are included. If any parts are missing or broken, please call Dultmeier Sales as soon as possible.

Consumers should notice that this manual may differ slightly from the actual product as more improvements are made to our products. Some of the pictures in this manual may differ slightly from the actual product as well. Dultmeier Sales reserves the right to update designs and / or change the specifications at any time without incurring any obligation to install them on units previously sold.

If you have any questions or suggestions about this manual, please contact us at:

800-228-9666
dultmeier@dultmeier.com
www.dultmeier.com

Table of Contents

Safety Information 1
Specifications 2
Maintenance & Storage 3
Parts Breakdown 4
Warranty Information 5
Checklist 6

To avoid serious or fatal personal injury or major property damage, read and follow all safety and operation instructions in the manual.

This is a **Safety Alert Symbol** -
When you see this symbol in the manual, look for the following signal words & be alert to the potential for personal injury or property damage.

DANGER Warns of potential hazards that **WILL** cause serious personal injury, death or property damage.

WARNING Warns of potential hazards that **CAN** cause serious personal injury, death or property damage.

CAUTION Warns of potential hazards that **WILL** or **CAN** cause minor personal injury, death or property damage.

IMPORTANT Indicates special instructions that **MUST** be followed but not related to hazards.

This manual is intended to assist in the installation and operation of this unit.
Do not attempt to operate this unit without reading and understanding this manual.

General Safety

To avoid the risk of serious bodily injury and property damage, read safety instructions carefully before installing this system. Follow all local and/or national plumbing and electrical codes when installing.

IMPORTANT

Do Not Allow System or Components to Freeze.
To do so may damage the system and will void the warranty.

WARNING

Never Run the System Dry.
Running the unit dry (without fluid) can damage internal parts, overheat pump (which can cause burns to people handling or servicing the pump), and will void the warranty.

WARNING



Hazardous voltage can shock, burn or cause death.

Risk of Electric Shock.
Keep the unit dry at all times -
Do not wash the motor or electrical panel or allow the unit to sit in standing water.

Use only Ground Fault Circuit Interrupter (GFCI) protected grounded outlet for the cord plug.
If you must use an extension cord, use only UL approved indoor/outdoor, 3-wire, grounding type cords. The cord must be rated to support amp draw. Do not allow any part of cord or receptacle ends to sit in water.

To avoid fatal shocks, proceed as follows if service is needed:

A. Turn off water to the system.
B. Disconnect the power at main electrical service before unplugging the unit.
C. Ground the electrical outlet box.
D. Take extreme care when changing fuses.


IMPORTANT



Check for Proper Rotation

Pump was designed for forward rotation to allow optimum lubrication of the crosshead area. Reverse rotation is acceptable if the crankcase oil level is increased slightly above center dot to assure adequate lubrication.

CAUTION

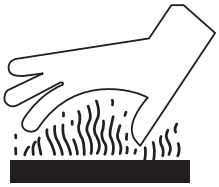

Burn Hazard
Do Not Touch An Operating Motor

Modern motors can operate at high temperatures. To avoid burns when servicing pump, allow it to cool for 20 minutes after shutdown before handling.

General Pump Prep Wash Unit Specifications

Model(s) ..... **DU PMTS2021-5**

Style ..... High Pressure Plunger Pump Unit

Capacity ..... 4 GPM

PSI 1800

Maximum Inlet Pressure ..... 125 PSI

Maximum Inlet Temperature ..... 165° F

Motor .....

CE EM3615T	5 HP, 3 PH	
Volts:	208 - 230	460
Amps:	13.9 - 13.4	6.7

Pump ..... IP TS2021B-L

Crankcase Capacity ..... 40.6 oz.

Pump Drive ..... Belt

Pump Inlet ..... 1/2”

Pump Discharge ..... 3/8”

Dimensions ..... Approx. 30”L x 20”W x 15”H

Shipping Weight ..... Approx. 180 lbs.

System Features

General Pump Plunger Pump

Heavy Gauge Stainless Steel Baseplate & Belt Guard

Adjustable Motor Baseplate

Unloader Valve for Pressure Relief

Safety Pop Off Valve

Glycerin-Filled Pressure Gauge

50’ High Pressure Gun Hose

Trigger Style Spray Gun with: Insulated Extension & Gun Swivel

All units are Pre-Plumbed & Tested Prior to Shipment.

Maintenance & Storage

1. Change the oil after intial 50 hours. Use General Pump Oil, part number **IP 100214-1** for 16 oz. bottles or **IP 100553-1** for 2.5 gallon jug. **(Fig. 1)**

IMPORTANT **This pump takes 40.6 oz.**

2. The oil should be changed every 500 hours. If other than General Pumps special custom blend multi-viscosity ISO68 hydraulic oil is used, change the oil every 300 hours.

3. Regulating Unloader Valve should be serviced or replaced when leaks occur or if not functioning properly.


4. For extended storage or between use in cold climates, drain all pumped liquids from pump and flush with antifreeze to prevent freezing and damage to the pump. When running antifreeze through system, open and close trigger gun so entire system is protected.



figure 1

Please refer to the included General Pump reference materials for additional information on the Maintenance & Storage of your General Pump Prep Wash System.

Parts Breakdown: DU PMTS2021-5

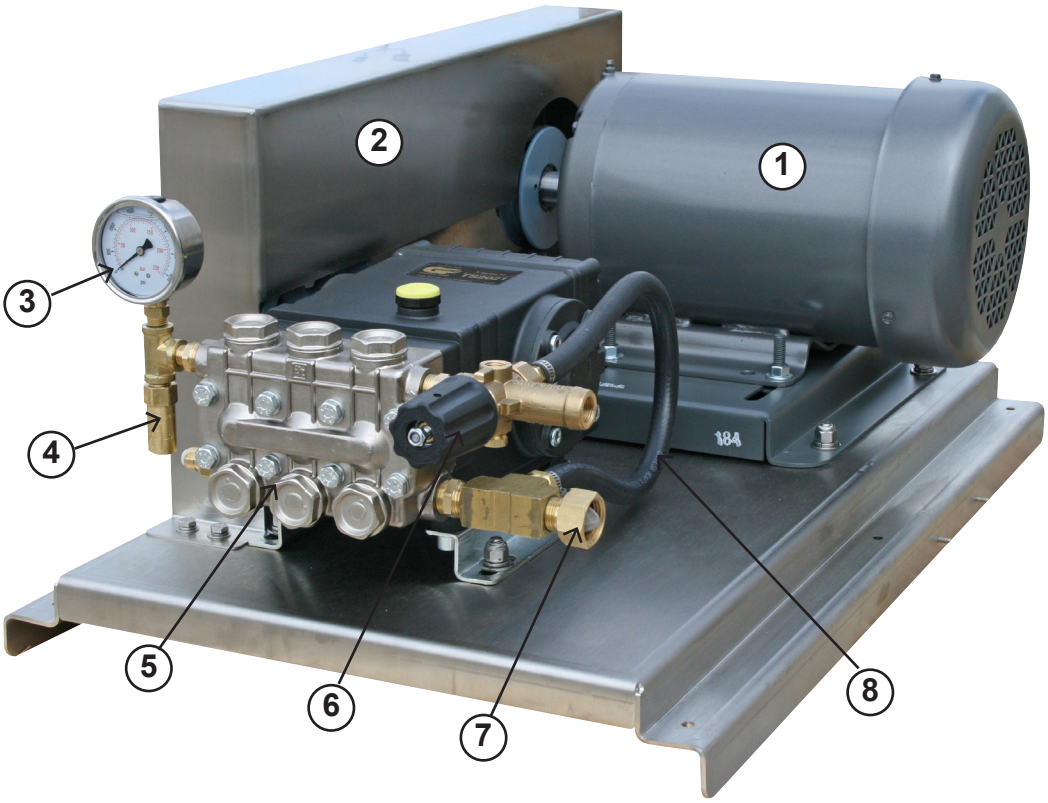

Item	Part Number	Description
1	CE EM3615T	Baldor Motor 5 HP 3 PH
2	*GA B45*	*V-Belt (2 qty.) (Not Visible, Located Inside Belt Guard)*
3	AH 2750-4	3600# Liquid Filled Pressure Gauge
4	GU 22568	Safety Pop Off Valve
5	IP TS2021B-L	General Pump Plunger Pump
6	NP ST261	Suttner Unloader Valve
7	HY 3800-35	Garden Hose Strainer
8	GA 3204EB-3/8	Black Adaptaflex Hose, 2 Braid, 3/8”
	GA 6HR50	*Black Wash Hose, 3/8” x 50’ (Not Shown)*
	NP ST300	*Brass Swivel (Not Shown)*
	NP ST1500	*Zero Leak Spray Wand (Not Shown)*
	NP ST007-18MF	*Wand Extension with Grip, 18” (Not Shown)*

Notice Regarding Manufacturer's Limited Warranty

Dultmeier Sales Limited Liability Company (hereinafter Dultmeier), notifies you that component part(s) carry a manufacturer's limited warranty provided by the manufacturer of said component part(s). These warranties do not pertain to normal wear of component part(s) that may occur within any specified period. While Dultmeier is not the manufacturer of any of the component part(s), Dultmeier will assist you in processing any and all manufacturer's warranty claim if applicable and available. Any and all manufacturer's claims must be submitted in writing to the manufacturer within the warranty periods provided by the manufacturer.

Defective component part(s) that are to be considered for manufacturer's limited warranty must be returned to the manufacturer by prepaid shipment with the applicable manufacturer's limited warranty period. If the component part(s) are deemed to be defective under the manufacturer's warranty, Dultmeier will assist in obtaining a replacement or repair of the component part(s). Said component part(s) will be returned F.O.B. Omaha, Nebraska. Replacement or repair shall be the exclusive remedy for any breach of warranty. Labor for installation, either with respect to original or replacement part or components, is not covered under the manufacturer's limited warranty.

Neither the manufacturer nor Dultmeier warrants loss of income or consequential damages for injury or commercial loss resulting from any breach of warranty or warranties stated above.

The manufacturer's limited warranty as stated does not apply to component part(s) which have been improperly installed, misused, altered, neglected, abused or not installed, adjusted, maintained, or used in accordance with applicable codes and ordinances and in accordance with the manufacturer's specifications as to such factors.

Notwithstanding Dultmeier's willingness to assist in the processing of the manufacturer's limited warranty, Dultmeier makes no warranty against infringement of the like, makes no warranty of merchantability, makes no warranty of fitness for a particular purpose, and makes no other warranty, express or implied, including implied warranty arising from the course of dealing or usage of trade.

Compliance with all local, state and federal codes regarding the installation and operation of said equipment, parts and components shall be the responsibility of the purchaser. The rights and obligations of the parties shall be governed by the laws of the State of Nebraska.

Dultmeier Sales • 1-800-228-9666 Omaha, NE • 1-800-553-6975 Davenport, IA

Production Checklist

- OK NA Oil Level
- OK NA Clamps Tight
- OK NA Bolts Tight & Anti-Seized
- OK NA Belts Tight
- OK NA Pulleys Aligned & Torqued to Specifications
- OK NA Fittings Straight
- OK NA Tested
- OK NA Winterized
- OK NA _____
- OK NA _____
- OK NA _____
- OK NA _____
- OK NA _____
- OK NA _____

- OK NA Pop-Off Valve Set _____PSI
- OK NA Unloader Valve Locked
- OK NA PSI _____
- OK NA Pump RPM _____
- OK NA Motor Amps _____
- OK NA Motor Wired For _____

Accessories

- OK NA Safety Pop Off Valve
- OK NA Trigger Gun 1 2
- OK NA High Pressure Hose
- OK NA Injector / Injector Hose
- OK NA Gauge
- OK NA Float Valve Part # _____
- OK NA Leveling Bolts

Built By _____ Checked By _____

Customer Checklist

- OK NA Oil Level To Manufacturer's Specifications
- OK NA Accessories Included
- OK NA Shipping Container Was In Good Shape
- OK NA Overall Condition

If you have any questions or concerns about condition of this unit, please contact us before operating.