
# DU PB80R
# DU PB80R-SS
# (tools list attached)

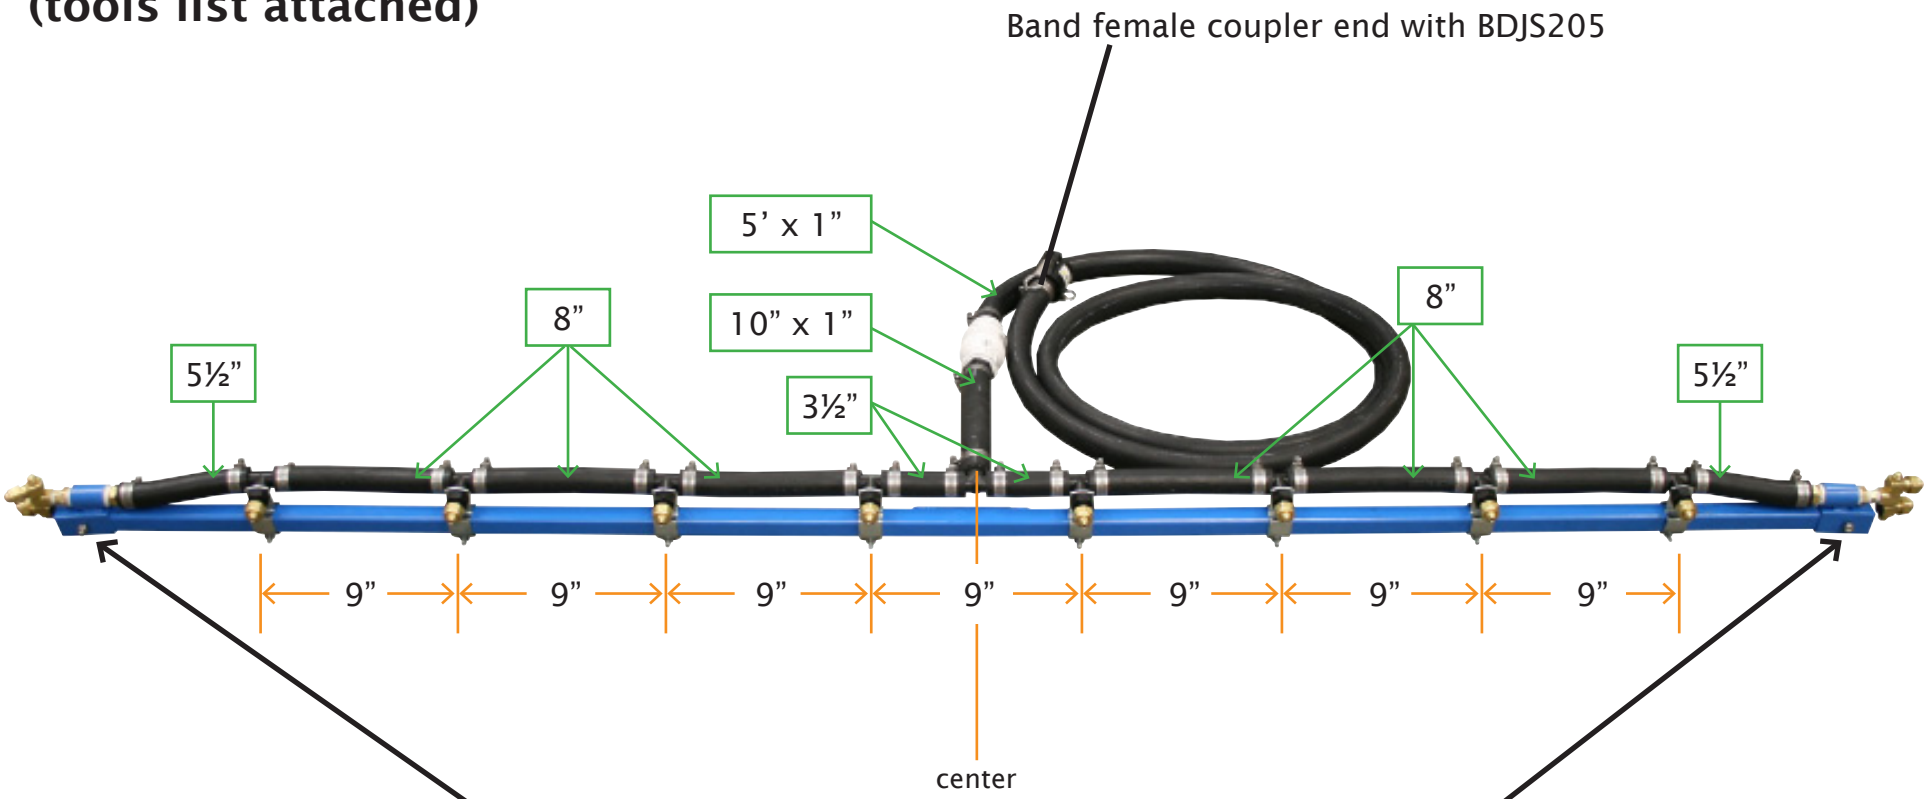


Stainless 1/4"x1-3/4" with flat washer on bolt-head side, and lock nut.

(2) Stainless 3/8x1 with 2 (per) flat washers and 1 (per) lock nut for bolts to go with hitch mount.

# Tools needed:

- 5/16 socket bit or nut driver
- 7/16 socket & wrench
- 10” crescent wrench
- Hose cutters
- Dixon Lube
- Teflon tape
- Blue pipe dope
- Band-it clamp machine
- 9/64” drill bit (for bolt on hitch mount)
- Anti-sieze
- Table-mounted vise
- Hand wrap