
DU AP3
INSTALLATION INSTRUCTIONS

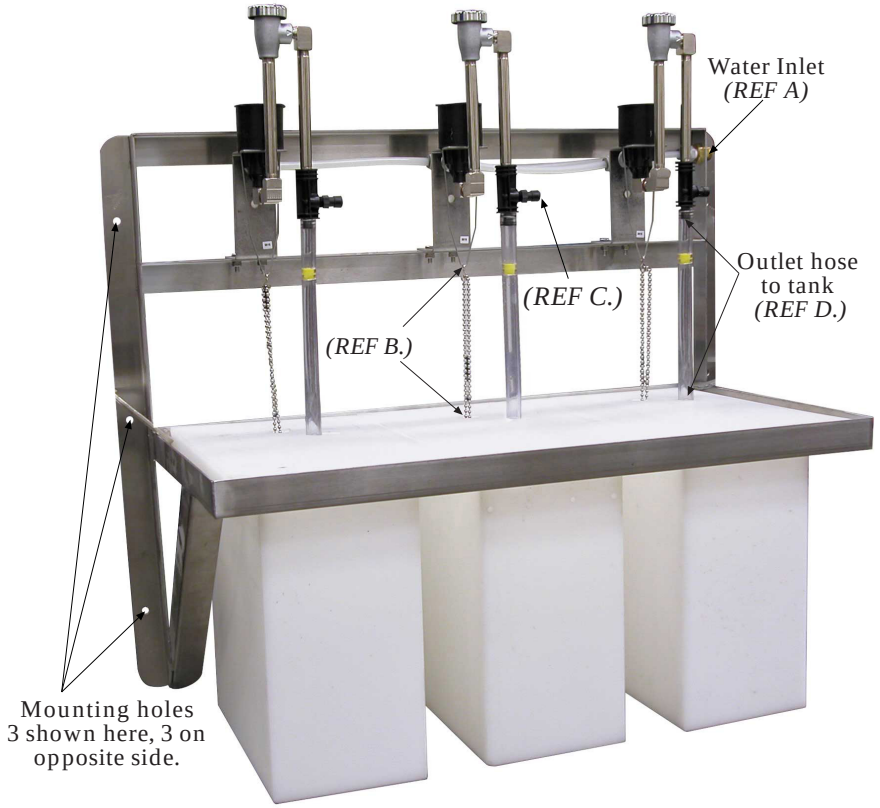



Water Inlet Assy.

1. Select location on wall for AP3 mixing station.
2. Holding unit level, mark all six mounting holes.
3. Drill a 5/16 hole 1-1/2” deep in all marked areas. *
4. Using fasteners provided secure AP3 to wall.
5. Place tanks inside wall mounted frame.
6. Mount Hydrominders on frame with bolts provided.
7. Install *Water Inlet Assembly* to Hydrominders by inserting the push fit female connector to the male stem adapter.
8. Thread on female garden hose adaptor to water inlet. *(REF A.)*
9. Remove lids from tank and put floats inside.
10. Thread chains through center holes of lids then through eyelet hole of Hydrominders. *(REF B.)* Let floats hang approximately 5”above tanks floor.
11. Replace the lids on the tanks lining up the two holes directly below the Hydrominders.
12. Install proper tips in Hydrominder valves. *(REF C.)*
13. Install the outlet hoses into the tanks. *(REF D.)*
14. Install one end of chemical hoses over the metering tips *(REF C.)* and other end inside chemical bucket.
15. Hook up water supply and slowly turn on water.

* *For concrete, block, or brick walls only.*

Dultmeier Sales
omaha, ne.
800-228-9666

DESCRIPTION
DU AP3
THREE COMPARTMENT
MIXING STATION

FORM	REV.	DATE	DRAWN BY
846	-	4/2/07	*J. Cappello*