
Parts Schematic for:
DU AP5TS


Tools:
- 8 or 10” crescent wrench
- 3/8 nut driver (in case hydrominder bolts are loose)
- table mounted vise
- teflon tape
- blue pipe dope
- black pipe dope
- 12x16 bag (1 per unit)
- 409
- rags
- air pressure tool (see pic on step 1)

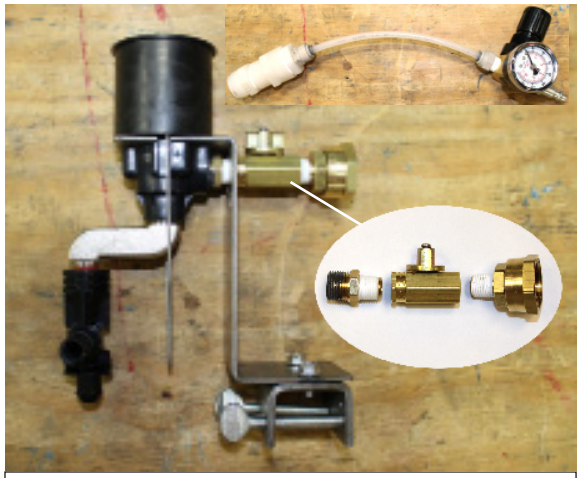


1. Assemble reducing nipple, valve and brass adapter using teflon tape. Arrow on valve points towards the Hydrominder.

   Apply black dope on the 3/8” side of the reducing nipple. Allow for dry time of at least 30 min then apply second coat and install on Hydrominder.

   Use air pressure tool to test for leaks using 409.

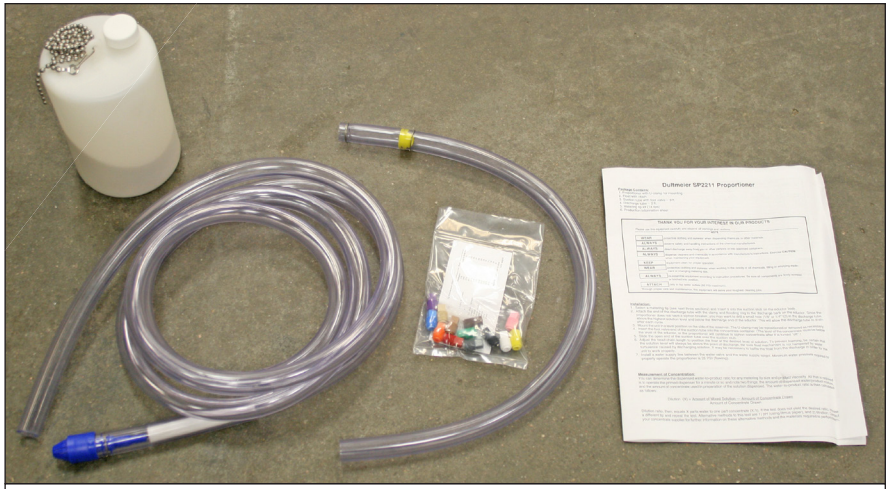


2. Place all five items in a 12x16 bag. *(Float Assembly, Suction Tube, Discharge Tube, Tips, & Instruction Sheet).* Wrap hose tight enough so it is not sticking above tank lid.

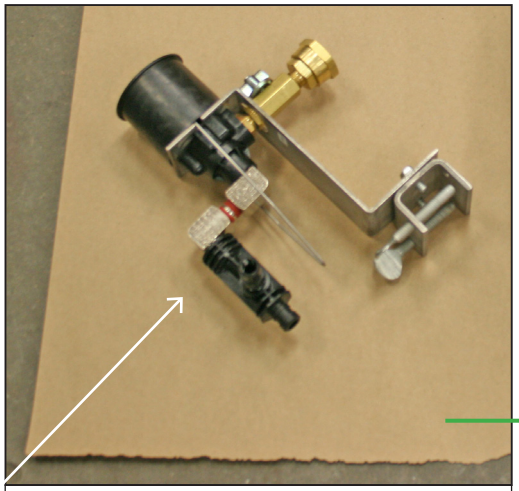


3. Wrap Hydrominder in brown paper - about 4’ is plenty.

“built by” sticker

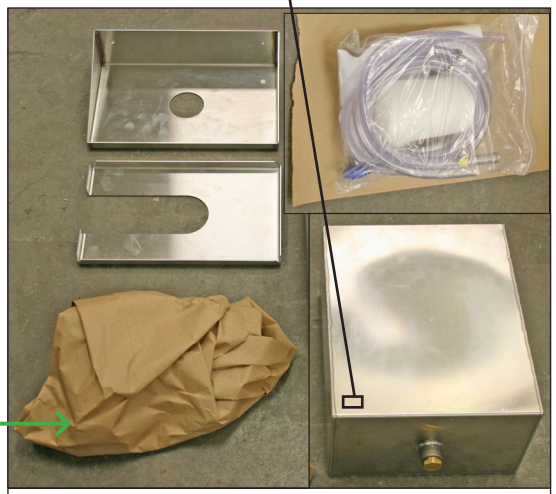

4. Teflon tape & blue pipe dope on 1/2” hex plug, install immediatley.

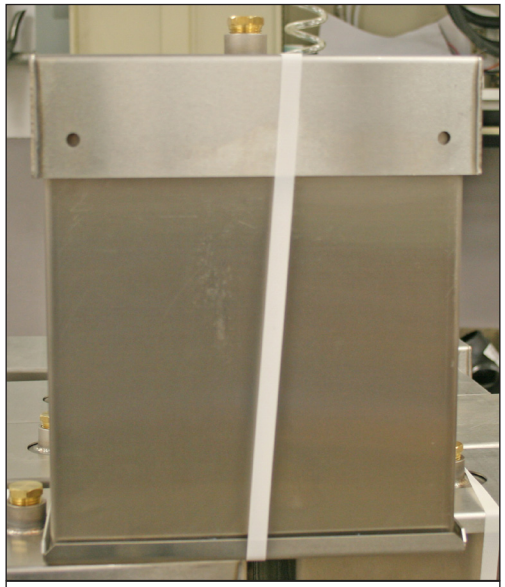

5. Place wrapped up Hydrominder and zip lock bag items in SS tank. Place lid and shelf on tank. Install a strap around the unit or use plastic wrap.